



CT70 ECS/CT40 BT60 ECS quick guide

This Guide is intended for quick consultation only and does not replace the Use and Maintenance Manual. Before using the machine, read the Use and Maintenance Manual contained in the machine packaging thoroughly and rigorously respect all the instructions.

PREPARATION/ OPERATION

1. Fill the detergent tank.



2. Release the emergency button to turn the machine on.



3. Lower the squeegee using the lever.



4. Press the brush button. The machine automatically lowers and attaches the brushes and starts the suction motor.



5. Hold the brush button down for 3 seconds to choose the type of operation, "MICRO SCRUB" or with traditional brush.



6. Press the suction motor button to disable suction if you want to prewash the surface.



7. Choose the direction of movement by moving the direction selector, turn the potentiometer to set the work speed.



8. Operate the drive lever.



9. Press the "H2O" button for at least 2 seconds to enable detergent flow. Press the button repeatedly to vary the quantity delivered.



10. Adjust head pressure on the surface to be cleaned by pressing the button repeatedly to vary the pressure. The pressure exerted is indicated by an LED display on the control panel.



11. Begin working.

12. When you have finished cleaning, proceed as follows:
- Turn the brush motor off.
 - Stop the detergent flow
 - Turn the suction motor off.
 - Press the emergency button.
 - Raise the squeegee.
 - If necessary, charge the batteries.



DAILY MAINTENANCE

Empty the dirty water drum through the drain hose.



Clean the dirty water drum.



Check the suction filter is undamaged and clean.



Check the detergent tank fill filter is undamaged and clean.



Check the detergent output filter is undamaged and clean.



Clean the brush and wash the microfibre in a washing machine.



Check the squeegee is clean and the blades are not damaged.



Check the battery charge.



To charge, insert the battery charger connector into the connector alongside the squeegee lifting lever.



REPLACING THE SQUEEGEE BLADES

- release the clip;
- remove the two blade retainers by pushing them towards the outside of the squeegee then extracting them;
- remove the blade;
- reuse the same blade by reversing the edge in contact with the floor until all four edges are worn out, or replace with a new blade, fitting it onto the screws on the body of the squeegee;
- reposition the two blade retainers by centring the widest part of the slots over the fixing screws on the squeegee body, then pushing the blade retainers inwards;
- fasten the clip.

 


AUTOMATIC BRUSH ATTACHMENT

Brush attachment, with the head raised, rest the brushes on the floor at the sides of the head. Push the brushes into the head, making sure they are aligned with the centring devices in the head. Press the brush button. The machine attaches the brushes automatically.



Brush release, stop the brushes and the suction motor by pressing the brush and suction motor buttons. Hold the automatic release button down for at least five seconds and the machine releases the brushes from the head automatically.



TROUBLESHOOTING

THE MACHINE DOES NOT COME ON/START UP	CHECK THE EMERGENCY BUTTON IS NOT PRESSED
	CHECK THE BATTERY CHARGE
THE SUCTION MOTOR DOES NOT WORK	CHECK THE DIRTY WATER DRUM IS NOT FULL
	CHECK THE DIRTY WATER DRUM LEVEL SENSOR IS NOT BLOCKED/MALFUNCTIONING
THE MACHINE LEAVES THE FLOOR WET	CHECK THE SQUEEGEE BLADES ARE NOT WORN
	CHECK THERE IS NO DEBRIS BETWEEN THE TWO SQUEEGEE BLADES
	CHECK THERE IS NO DEBRIS IN THE SUCTION HOSE
	CHECK THE SUCTION FILTER IS UNDAMAGED AND CLEAN
	CHECK THE DETERGENT TANK LID IS CLOSED CORRECTLY
	CHECK THE SUCTION HOSE IS CORRECTLY ATTACHED TO THE SQUEEGEE
THE MACHINE LEAVES THE FLOOR DIRTY	CHECK THE TYPE OF BRUSH/PAD/MICROFIBRE IN USE IS SUITABLE FOR THE TYPE OF DIRT AND FLOOR.
THE MACHINE LEAVES STRIPES OF WET FLOOR	CHECK THE FLOOR HAS BEEN BRUSHED BEFORE USING THE MACHINE
	CHECK THERE IS NO DEBRIS BETWEEN THE TWO SQUEEGEE BLADES
	CHECK THE SQUEEGEE BLADES ARE NOT WORN
	CHECK THE SQUEEGEE IS CORRECTLY ADJUSTED